

# fliX Live Camper

## Manual

Read carefully before using fliX Live. Any questions? Please contact us: +49 – (0)421 – 794 25 45 or [info@fliX.eu](mailto:info@fliX.eu).



Some photos are taken with the **Live Classic** model, recognizable by the white surface – fliX Camper is only available in coffee brown, not in white.

## Contents

Scope of delivery.....	2
Technical Data .....	2
Lighting .....	2
Set up & align .....	3
Transport .....	3
Load & unload .....	3
Erect in the car .....	3
Store devices .....	4
Power supply .....	4
Drawer.....	4
Wings .....	5
Additional weights .....	8
Accessories to insert into the wing.....	9
GN water station.....	9
GN chopping station.....	9
Stoves & grills.....	10
Gas connection.....	11
Cooking utensil holder .....	12
Cutlery holder .....	12
fliX Live in the rain .....	12
Differences Live Classic - Camper .....	13

## Scope of delivery

- Live Camper with 3 wings
- 2 Table boards - turn the wing to a table
- Drawer (sound insulated) with 7 stainless steel jars
- GN chopping station with 6 GN boxes and lids
- GN water station: 2 sinks, 1 draining board, 12 l canister with soap dispenser
- Cooking utensil holder with 2 hooks
- Integrated: waterproof sockets, lighting, water level, adjustable feet

## More accessories

Gas stove, charcoal grill etc. ... please visit our shop

## Technical data

### Weight

With additional weights, without devices: **48,5 kg**

Weight empty without additional weights, without devices: **35 kg**

### Size

Packed: 48 x 48 x 100 cm

Assembled (2 wings): 167 x 42 x 100 cm (L x W x H)

Height: 100 cm

Length of a wing: 62 cm

## Lighting

The powerful LED lighting (included with the flix Live Camper) is more than just decoration - this light allows you to work all night long. You can power it with the sockets, and it can also be powered by use of your power bank.

The switch of the lighting is located in the body, right side.



## Set up and align



Live Camper is equipped with 2 large wheels and 2 adjustable feet, which allows to use it even on uneven ground. The feet are equipped with adjusting screws. These can be adjusted by hand.

With the help of the built-in water level you can align flix Live horizontally.

## Transport



**On foot:** The kitchen can be pushed like a sack cart – to make this comfortable, there is a sturdy handle on the back. The large wheels even allow driving over difficult terrain, such as meadow, cobblestone, stairs.

**In the car:** The easiest way to transport the kitchen is to lay it down – it can be secured with lashing belts, just like other items. Standing transport is also possible – securing is done via lashing belts or special floor fastenings. Please contact us.

**Transport size:** 48 x 48 x 100 cm

## Load & unload

The kitchen is not lifted into the car, but tipped over. Thanks to the famous lever principle, the load is halved, and thanks to additional rollers on the back, the kitchen can be easily slid into the car. You can do that very well on your own.

## Erect in the car

Just as easy as loading, the kitchen can be erected in the car – pull the kitchen up by the handle (remember: thanks to our clever lever principle, it weighs only half). This only takes a second and is not a problem for less powerful people.

**Video**  
Youtube:

**Camper**  
**Loading**



**Video**  
Youtube:

**Camper**  
**Setup**





## Store devices

In the body of the flix Camper there is space for appliances such as water or chopping station, stove or grill, gas bottle etc.

For comfortable loading and unloading the front wing can be opened very far upwards – the wing supports hooks into special holes and hold the wing up.


To ensure that nothing rattles on the go, integrated belts with extremely stable industrial Velcro provide lashing possibilities.



**Gas stove NJ 60** : This large stove can be stored in the body – but please follow the following order:

1. Stove - pull in the stove on the left side
2. Water canister - the round lid is in front, right (see picture)
3. Remaining equipment

## Power supply

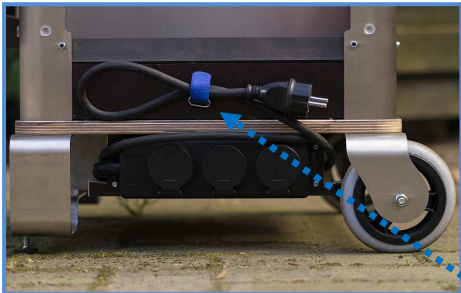

The built-in socket strip can be connected to a standard 230V socket. The maximum load of the socket strip is 3,5 kW (3.500 watts).

The LED lighting has a power of about 10 watts.

The cable can be wound around the socket strip. The end of the cable is secured by a Velcro fastener.



## Drawer

In the drawer there are 7 jars for spices (included), in addition there is space for your tools and knives.

The drawer is completely lined with sturdy felt so that nothing ripples on the way.



If you use the front wing, you may not be able to open the drawer – take out spices & tools beforehand – or the whole drawer.

## Wings


fliX Live is equipped with fold-out, multi-functional wings at three of the four sides.

### Adjusting wing height

With the Camper model, the height of the wings can be set in 5 steps.


To do this, unscrew both the wing and the wing support inside the kitchen (8mm wrench required) and fasten both at the desired height.

### Unfold a wing

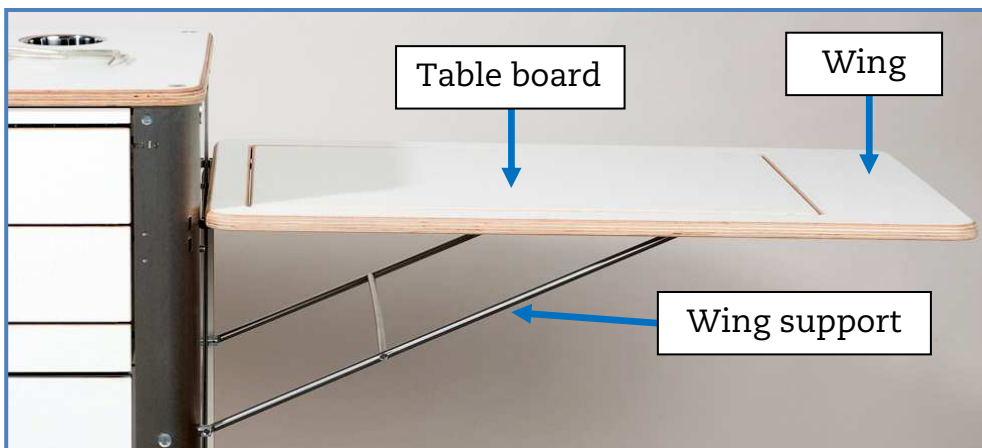

The wings can be fixed **horizontally** or **tilted**.

Underneath each wing are situated 2 special metal fittings. Each has 2 small openings.

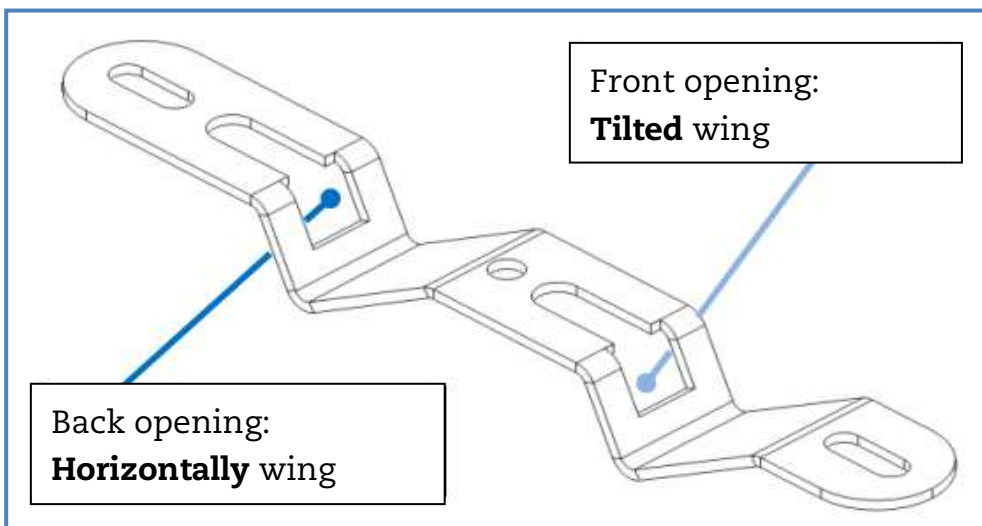

The wing support hooks into this openings.

## Horizontally wing



Fit in the wing support into the back openings. The wing can be used as table area now.




**Additional equipment:** take out the **table board**, which is fixed by high-power magnets. Then the wing offers space for GastroNorm (GN) sized equipment:

- GN water station
- GN chopping station
- Stove, grill
- GN Chafing Dishes, GN boxes etc.

## Tilted Wing



Fit in the wing support into the front openings. The wing is fixed with a slope of circa 10°.

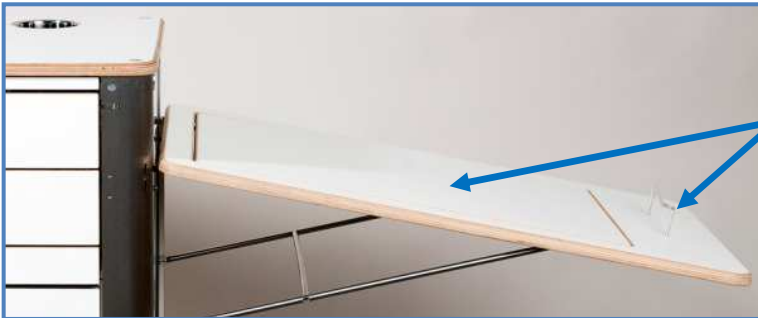

**Plates on the tilted wing:** On the surface of the wing, 2 pairs of small holes are situated. With help from small steel-brackets your plates come to stand horizontally on the tilted wing.



## Fold in the wing

Lift up the wing support a little bit. The end of the wing support can then be unhooked. Now you can fold down the wing.

## Loading capacity

Each wing can be loaded with up to **20 kg**.

Due to additional weights in the base flix Live does not tip over.

← **20 kg**



**Please note:** if you load heavily a single wing, make sure that:

- The load is not situated only at the end of the wing
- flix Live is standing on a flat surface

## Additional weights

Under the base plate of Live Camper there are 2 steel weights, each weighing 6,7 kg. The weights are removable, so you can load flix Live more easily if needed.



## Accessories to insert into the wing GN water station



The water station is part of delivery.

### Parts:

- 12-litre canister with integrated soap dispenser, water tap with flexible hose
- 2 canister holders (aluminium) for attaching the canister to the toolbar, 2 GN plastic sinks, 1 stainless steel drain-board
- Stainless steel frame for mounting the GN boxes in the wing



← wing

**Canister:** attach the tool holder first (p. 12). With the help of the two canister holders you can now hang the canister to the tool-holder. The tap can be positioned either to the right or to the left.



**Mounting the tap:** Position the rubber seal on the outside; in the canister there is only the counter screw.

**Sink:** first place the frame in the wing. Now you can put the sinks and drainboard as required.




## GN chopping station

The chopping station is part of delivery.

### Parts:

- Chopping board
- Stainless steel frame for hanging in the wing
- 6 GN boxes with lid

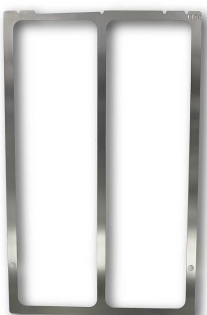

First insert the frame into the wing. If necessary, you can now put the 6 GN boxes here.

At last, put on the chopping board. This is dimensioned in such a way that the cut ingredients can be pushed directly to the left and right into the boxes.

To use the middle boxes, lift the board.

## Stoves & grills

All types of stoves and grills are available for flix Live: electric stove, induction, gas, charcoal grill, gas- or electric grill. More possibilities: please visit our shop.

Live Camper is offered in the basic version with, but also without a stove – because many customers want to continue using an existing stove.

### GN charcoal grill

#### Parts:

- Outer pan (without holes)
- Inner pan / coal pan (with holes)
- Stainless steel cooking grate and special grip
- Stainless steel wind screen
- Heat protector



**Insert the grill in flix Live:** Fit the outer pan directly into the wing. After that the coal pan is inserted, than the wind screen can be put on the grill. Now you can put the charcoal in the coal pan.



**Heat protector:** The lateral slices of flix Live consist of acryl, which cannot stand big heat. For that reason there is an additional protector, made of stainless steel. It is placed between wing and acrylic slice (see picture).



**Cooking grate:** the cooking grate can be placed at the desired height with the help of the grip.

## GN gas grill

### Parts:

- Stainless steel wind screen (2 parts: base and upper part)
- Gas grill insert including drip plate
- Stainless steel cooking grate and special grip
- Instruction manual



**Insert the grill in fliX Live:** Put the base of the wind screen directly into the wing. Put the upper part of the wind screen (with the „fliX“ logotype) onto the base. Put the complete gas grill insert in the deepest slot of the upper part of the wind screen. Now the cooking grate can be placed at the desired height.

For connecting the gas grill with the bottle and for placing the angular sheets on the grill: please see the instruction manual of the grill.

## Gas stove

We offer different gas stoves – please visit our shop.

## Gas connection

The gas appliances supplied by us are designed for operation with liquefied gas (bottle gas: propane, butane, 50 mbar).



## Cooking utensil holder

The tool holder is fixed by 2 knurled screws at any of the sides of Live Camper.

The toolbar and 2 hooks are included within delivery of Camper.



## Cutlery holder

The holder can be hooked into any of the four table legs – tool-less mounting.



The cutlery holder is not made only for cutlery. You can put other tools, the hand blender or anything else here.

## fliX Live in the rain

The materials that fliX Live consists of are weatherproof. Nevertheless, the kitchen should be protected against rain with the weatherproof cover when not in use. It is even better to put fliX Live under a roof.

In winter, fliX Live should find a dry place in the garage or under a roof.



## Differences Classic – Camper

What are the differences between the two models Classic and Camper?

	Classic	Camper
<b>Size</b>		
Storage size, cm	100x48x46	100x48x48
Length of a wing, cm	72	62
Total length (fold out 2 wings), cm	187	167
Weight empty, kgs (without additional weights, without devices, with table boards)	45	35
Additional weights, kgs	3x (20 kgs)	2x (13,5 kgs)
Total weight, kgs (with additional weights)	65	48,5
<b>Basics</b>		
Wood colour	Pearl white/coffee brown	Coffee brown
Wheels	4x wheel / 2x wheel + 2x adjustable feet	2x wheel + 2x adjustable feet
Lighting	Decoration, multicolour	Working light, white
Sockets	5x	3x, waterproof
Drawer	4x	1x
<b>Accessories</b>		
Table board	3x	2x
GN water station	without	1x
GN chopping station	1x	1x
Stove / grill	1x (free choice)	Surcharge
Waage	1x	without
Spice jars	12x	7x
Oil & vinegar station	1x	without
Porcelain plates	4x	without
Cooking utensil holder	1x	1x
Cutlery holder	1x	1x